 
 


HANDHELD TWO WAY RADIO USER MANUAL

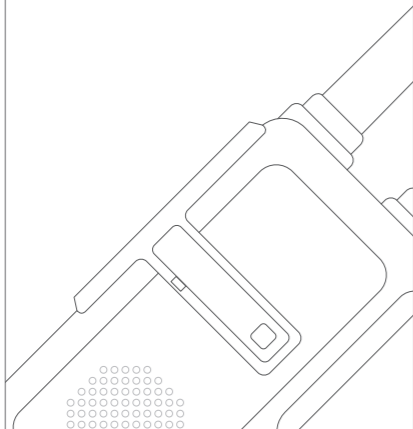

Product Overview

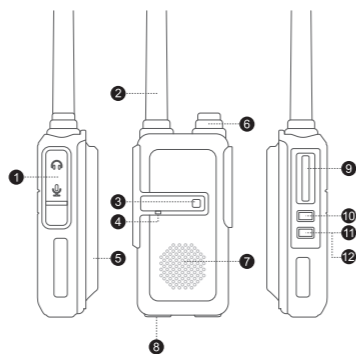


- | | |
|---------------------|--------------------|
| 1 Accessory Jack | 7 Speaker |
| 2 Antenna | 8 TYPE-C Connector |
| 3 Indicator | 9 PTT Key |
| 4 Mic | 10 Channel + |
| 5 Battery | 11 Channel - |
| 6 Power/Volume Knob | 12 Programmed Key |

Power ON/OFF and Volume Adjust

Power ON: Turn the Power/Volume Knob clockwise to switch ON the transceiver until a click sounds.

Power OFF: Turn the Power/Volume Knob counterclockwise to switch OFF the transceiver until a click sounds.

 
Volume Adjust: In standby, rotate the Power/Volume Knob to adjust the volume. Turn clockwise to increase the volume and counterclockwise to decrease the volume.

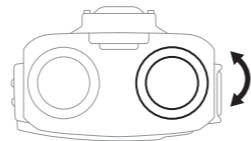

Selecting a channel


Short press "Channel +" to increase the channel number.

 Short press "Channel -" to decrease the channel number.

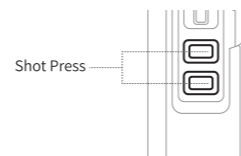


Push To Talk

 To make a call, press and hold the PTT switch, then speak into the microphone using your normal speaking voice. Release PTT switch to receive.

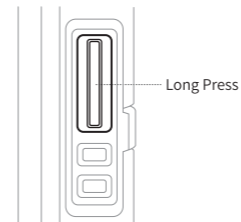

Charging the Battery

 Connect the charging cable to the power adaptor, plug the power adaptor into the AC outlet, and insert the charging cable into the TYPE-C connector at the bottom of the radio.

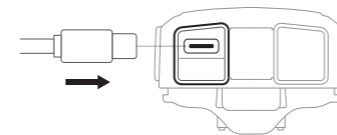

Programmed Key

Its function can be defined by programmable software.

None: No function

Monitor: Use the Monitor function to check if a channel is currently in use by others. When an empty channel is located, you will hear continuous static and noise on that channel.

Scan: When scanning, the transceiver checks for a signal on each channel and only stops if a signal is present.

Scrambler: The transceiver scrambles your voice so that anybody listening to your conversation will not be able to understand what you are saying.

Emergency Alarm: To active emergency alarm function, the transceiver will transmit the alarm ring for 20 seconds, and receiving for 10 seconds, continuously. Press PTT to exit the Alarm.

Care and Cleaning

To guarantee optimal performance as well as a long service life of the product, please follow the tips below.

- Do not puncture or scratch the product with hard objects.
- Do not place the product in corrosive agents, solutions or water.
- Do not handle the radio by its antenna or external microphone directly.
- When not in use, keep the accessory jacks covered with the protective caps.

⚠ Power off the product, and remove the battery before cleaning.

- Clean up the dust and fine particles on the product parts with a clean and dry lint-free cloth or a brush regularly.

- Use a non-woven fabric with neutral cleanser to clean the keys, control knobs, and shell after long-time use.
- Do not use chemical preparations such as stain removers, alcohol, sprays or oil preparations.

- Make sure the product is completely dry before use.